


CHNI6C

Steering Wheel Control Interface *for select Nissan vehicles*

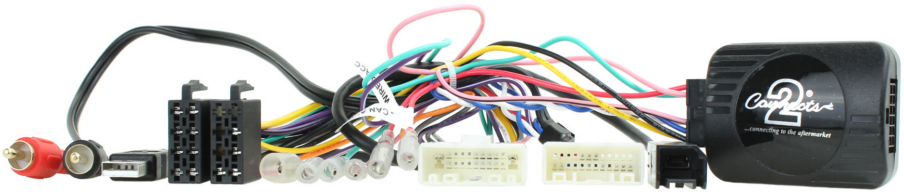

Application:
Qashqai (J11, Acenta Only) 2014>
X-Trail (T32) 2014>
Pulsar 2015>
Titan 2015>
Micra* 2017>

***For Vehicles without Parking Sensor or Reverse Camera**

Designed and
Engineered
in the UK. 

CHNI6C

Nissan Steering Wheel Control Interface. Retains OEM Aux Socket (If feature is available).

Product Contents

1. Interface
2. Harness
3. Instruction

Prior to installation

Read the manual prior to installation. Technical knowledge is necessary for installation. The place of installation must be free of moisture and away from heat sources. Please ensure you use the correct tools to avoid damage to the vehicle or product.

Connects2 can not be held responsible for the installation of this product.

Wiring Colour Codes

Wire Colour	Function
Yellow	Permanent 12V
Black	Ground
Red	12V Ignition
Orange	Illumination
Green	Park Brake
Pink	Speed Pulse
Purple	Reverse


Wire Colour	Function
Purple	Right Rear Speaker +
Purple/Black	Right Rear Speaker -
Green	Left Rear Speaker +
Green/Black	Left Rear Speaker -
Grey	Right Front Speaker +
Grey/Black	Right Front Speaker -
White	Left Front Speaker +
White/Black	Left Front Speaker -

Technical Support

If you need assistance setting up or using your Aerpro product now or in the future, call Aerpro Support Australia
TEL: 03 – 8587 8898 FAX: 03 – 8587 8866 Mon-Fri 9am – 5pm AEST. If you would like to download a digital copy of this manual, or other Aerpro manuals/software, please visit the <http://aerpro.com> website.

FITTING GUIDE

1. Remove and disconnect the original head unit.
2. Connect the 12 way molex connector of the head unit patch lead (supplied separately) to the interface.



3. Connect the opposite end of head unit patch lead to the head unit steering wheel control input on the back of the aftermarket head unit. This may be a 3.5mm jack plug or a wire input depending upon the head unit brand being fitted.

Please see the head unit installation manual for further information on where to connect.

Important Note: This step must be completed before connecting power to the interface. Failure to do so may result in no steering wheel control function.



4. Connect the 14 way molex connector to the interface



FITTING GUIDE

5. Connect the male power/speaker ISO harness to the female power/speaker ISO harness from the aftermarket head unit. For aftermarket head units without an ISO connector, please refer to the wiring colours on Pg. 2.

6. Connect the female vehicle specific connector to the male vehicle connector and connect the USB red/white aux connections to the head unit to retain these features (if vehicle is equipped).

STEERING WHEEL CONTROL FUNCTIONS

- | | |
|-------------|---|
| 1. Track - | Setting Vehicle Time |
| 2. Track + | Press and hold 'Enter' for 8 seconds (Micra - set the MDF to Aux and hold the button for 8 seconds). Use Track - to change hours and Track + to change minutes. Short press Enter to set the time, or press and hold Enter to exit the menu without saving changes. |
| 3. Volume - | |
| 4. Volume + | |
| 5. Pick Up | |
| 6. Hang Up | |

